

THE CLAW

There is nothing binding about the specialized fit and feel of our footwear. Every component of these models is cut, sewn, molded, and blended for a specific size and riding preference. Congratulations on your purchase of our most advanced line of models yet.


Each pair of boots comes complete with the following units.

Each pair of bindings comes complete with the following:

- 4 Claws
- 4 Aluminum claw stabilizers
- 4 Nylon Washers
- 4 Bolts attaching the binding to the board

How it works...

After you have positioned your bindings on your board to the desired stance. Position each Claw so that it hooks over the top of the track. Each bolt will then thread into the insert of the board while the Claw is attached to the track of the binding plate. Only thread the bolt a couple of rotations into the board so the binding can move freely around to fine tune your stance. Once you have the bindings at the correct angle it is important to make sure the Claw falls inside of the grooves of the track. Then tighten up the device as firmly as possible. This will ensure a snug fit with the board. It is important to check your setup periodically to make sure the bolts are tight.

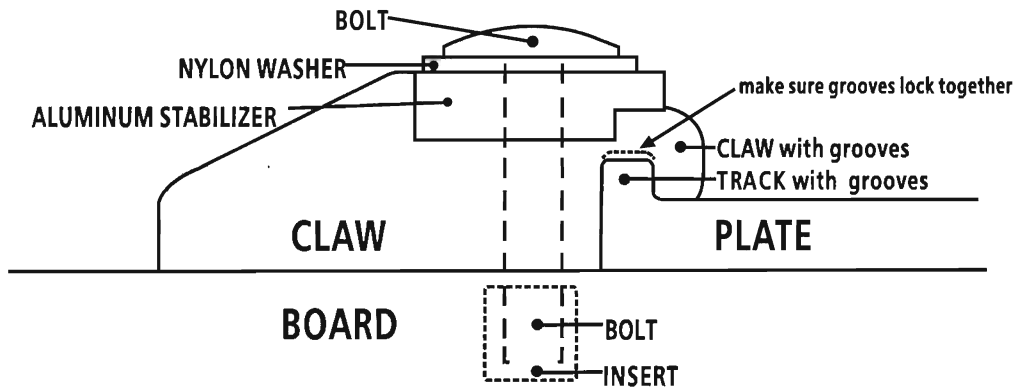


STANCE CHEAT SHEET

NOTE: This is only a guideline. Depending on your height, weight, hair color, and style of riding, slight variations from these recommendations may apply.


BEGINNER/RECREATIONAL RIDERS

First determine which foot you prefer forward. If you're not sure have your buddy nudge you from behind and see which foot you brace yourself with first - this is your stronger foot and should be in the tip of the board. You will find it easier if your back foot is in the far back insert location at a 0° setting. The front plate will be 18° leaving 3 insert holes exposed on most boards. This stance is the most stable for deep water starts and initial cuts on a board.

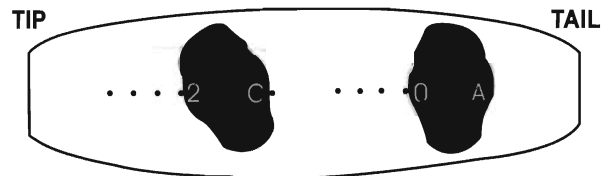


INTERMEDIATE/ADVANCED RIDERS

Congratulations! You now know how to glide on the water with a wakeboard. Now you are looking to ride switch, fakie, do 180's or go backwards - whatever you want to call it. We recommend you move both your front foot and your rear foot one hole further forward. Also move your back foot to a -9° setting for more of a neutral or duck-foot stance. These changes will move your weight forward making it easier to spin.

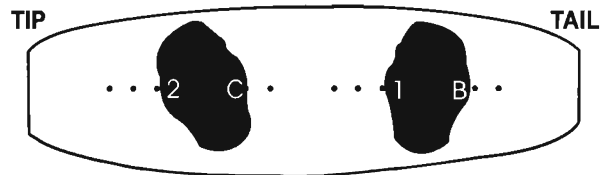

ADVANCED/EXPERT RIDERS

By this point you have mastered the art of riding switch. Now you should ride the board centered by moving the front plate forward one notch and rotating that plate to 9°. This duck-foot stance will help you diversify your riding for a new bag of tricks. At this level your binding stance should be roughly shoulder width apart.

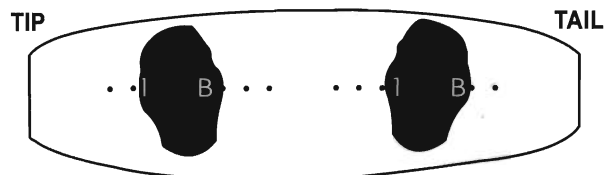


If you are looking for further advice we recommend you check out Shaun Murray's instructional video series: DETENTION.


Illustrations show left-foot forward rider.

THE BENEFITS

A couple of seasons ago our riders asked for an easier way to adjust stance options and a way to maintain a stance while shifting their boot closer to a toeside or heelside rail. This system adjusts from + 24 degrees to -24 degrees and any where in between. A rider doesn't have to remove bolts from the insert and reattach them to vary a stance angle.

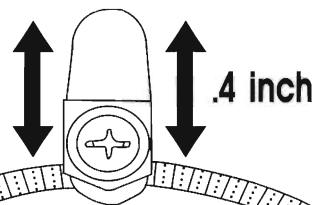

Once you have your desired stance a rider can now adjust that same stance angle forward and back. A rider can now be closer to their heelside/toeside rail while keeping the same angle.

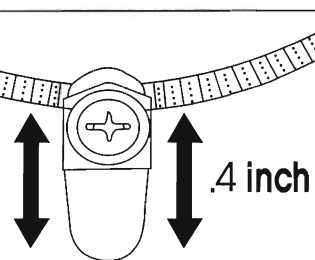

If you have further questions give us a call 1.800.938.4040